
Locking and unlocking

Keys 10
Doors 10
"Child-protection" rear doors* 12
Keyless entry system* 12
Central door locks* 13
Bonnet 14
Backdoor 15
Manual window control* 17
Electric window control* 17
Sliding window* 19
Tilt up sunroof* 19
Electric sunroof* 22
Canvas top* 27

LOCKING AND UNLOCKING

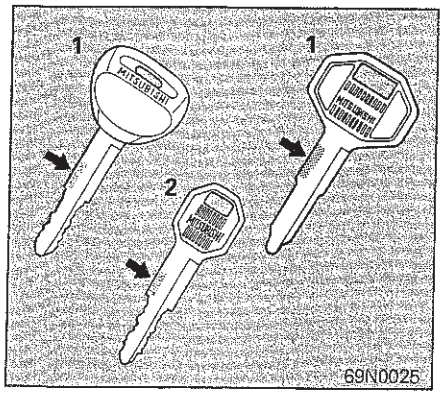

Keys EF11A-V


1 – Master key
2 – Sub key

Three keys are provided. Two of them are master keys and the third is sub-key.

The master keys fit all locks. Keep one in a safe place as a spare key.

The sub-key fits all locks except for the boot lid and glove box.


NOTE
The key number is stamped on the key as shown in the illustration.
Make a record of the key number so that you can order a key from your authorized MITSUBISHI dealer in the event the original keys are lost.

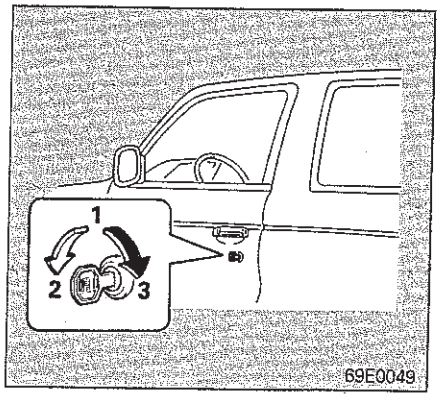

Doors EF12A-Ca

Operation from outside the vehicle


1 – Insert or remove the key
2 – Lock
3 – Unlock

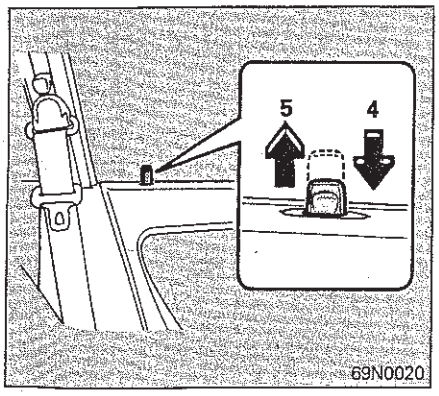

Operation from inside the vehicle


4 – Lock
5 – Unlock

Pull the inside handle toward you to open the door.

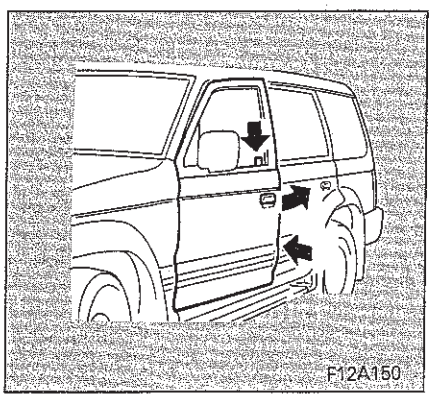

To lock the front doors without a key

Set the inside lock button to the locked position and, while pulling the outside handle up, close the door.
Be careful not to lock the doors while the key is inside the vehicle.

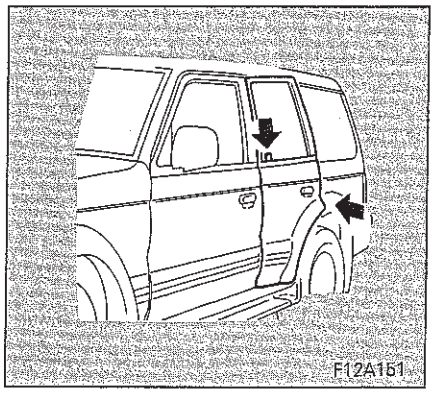


To lock the rear doors

Set the inside lock button to the locked position, and close the door.

⚠ *CAUTION*

(1) Make sure the doors are closed: driving with doors incompletely closed is very dangerous.
(2) Never leave a child in the vehicle unattended.

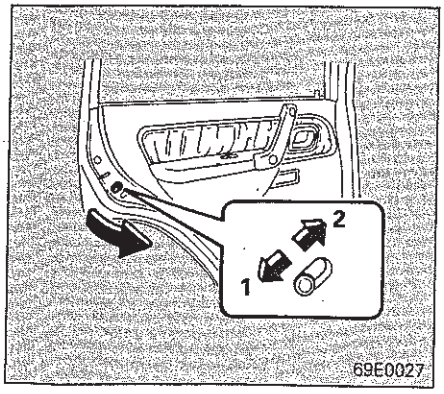

"Child-protection" rear doors* EF12C-Da

1 – Lock
2 – Free

Child protection helps prevent doors from being opened accidentally, especially when small children are in the second or third seat.
The lever is provided on each rear door. If the lever is set to the locked position, the rear doors cannot be opened from inside the vehicle.
To open the rear door while the child protection is in use, pull the outside door handle.


If the lever is set to the "Free" position, the child protection mechanism does not work.

Keyless entry system* EF11B-Be

Press the remote control switch, and the all doors will be locked or unlocked as desired. Pressing the LOCK switch or UNLOCK switch will turn on the indicator lamp.

To lock
Press the LOCK switch, and all doors will be locked. When they are locked with the room lamp at the [•] position, the room lamp blinks twice.

To unlock
Pressing the UNLOCK switch once will unlock the driver's door only. When unlocked with the room lamp at the [•] position, the room lamp will be turned on for 3 seconds. Press the UNLOCK switch one more time, and all doors will be unlocked.

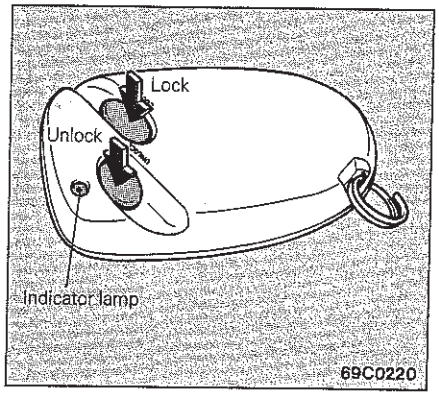

NOTE
1. The keyless entry system does not operate if the key is left in the key cylinder, or the door is open.
2. If the UNLOCK switch is pressed and no door is opened within approximately 30 seconds: relocking will automatically occur.
3. The remote control switch will operate within about 4m from the vehicle. However, the operating range of the remote control switch may change if the vehicle is located near a TV transmitting tower, power station, or radio broadcasting station.

4. If the following conditions are observed after pressing the remote control switch, the self-contained battery may need to be replaced.
   - The doors cannot be locked or unlocked.
   - The indicator lamp glows dimly, or does not light.

   Replace the battery at your authorized dealer.


5. If your remote control switch is lost, please contact your authorized MITSUBISHI dealer for a replacement remote control switch.

⚠ *CAUTION*

(1) Do not leave the remote control switch where it may be exposed to heat caused by the direct rays of the sun.

(2) The remote control switch is a precision electronic device. Therefore, pay attention to the following.


- **Do not impose shock on the remote control switch.**
- **Keep the remote control switch dry.**
- **Do not disassemble the remote control switch.**

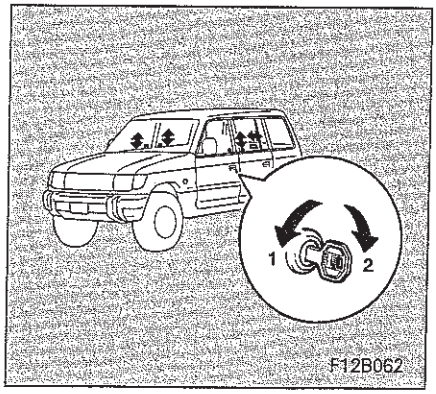


Central door locks* EF02B-N

By locking or unlocking either the driver's door using the inside lock button, or one of the front doors (driver and passenger side) using the key, all of the doors can be simultaneously locked or unlocked.

1 – Lock
2 – Unlock

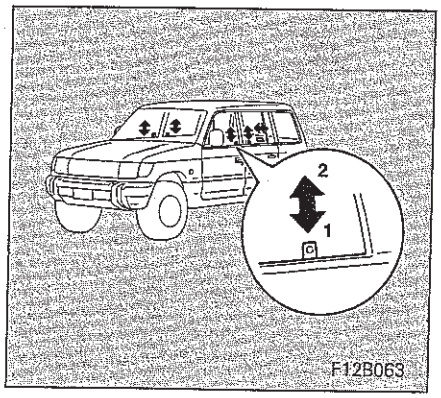


NOTE
Each of the rear doors can be locked or unlocked independently by using the inside lock button.

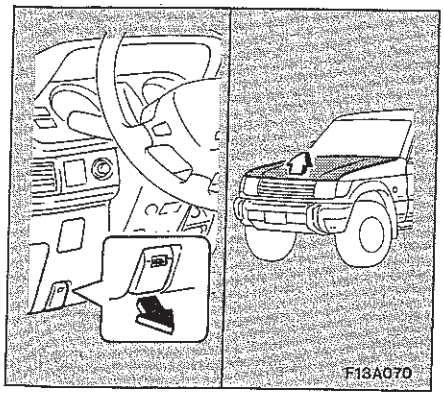

Bonnet


EF13A-Ea

To open
Pull the release lever toward you to unlock the bonnet.

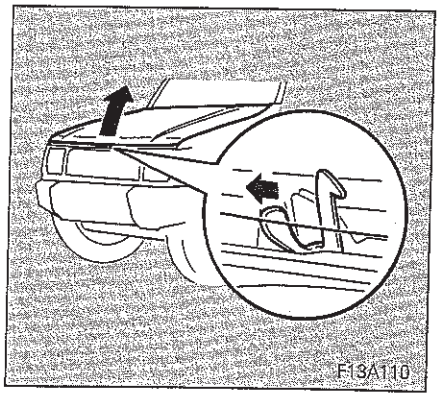


Raise the bonnet while pressing the safety lock.

NOTE
Only open the bonnet when the wipers are in the parked position.

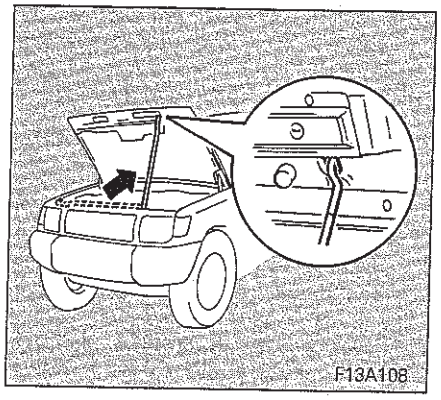


Support the bonnet by inserting the support bar in its slot.

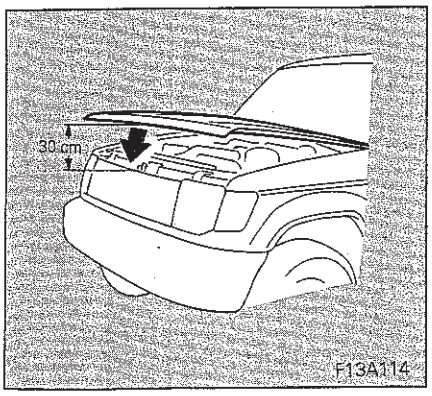

To close
Unlatch the support bar.
Slowly lower the bonnet until it about 30 cm above the closed position, then release it to drop from its own weight.

NOTE
If this does not close the bonnet, release it from a slightly higher position.

⚠ CAUTION
Before driving, make sure that the bonnet is securely locked. An incompletely locked bonnet can suddenly open while driving. This can be very dangerous.

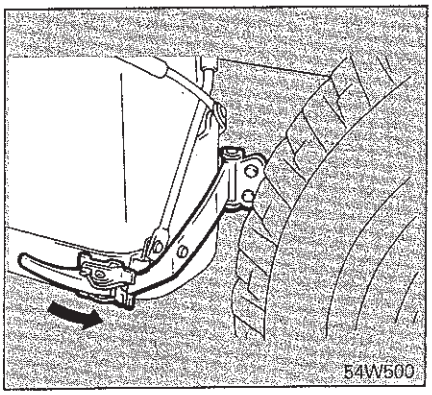


Backdoor

EF05C-Fa


Operation from outside the vehicle

To open the tailgate on vehicles equipped with a spare fuel tank, first unlock the bracket, and then swing it to the left. After closing the tailgate, return the spare fuel tank bracket to its original position, and be sure it is securely locked.

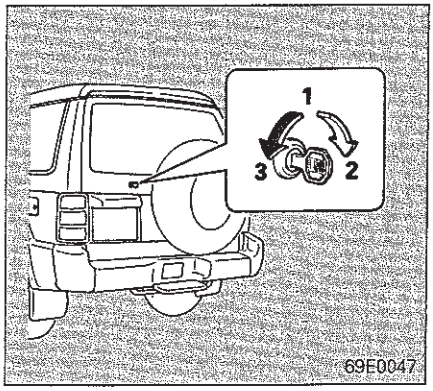


1 - Insert or remove the key.
2 - Lock
3 - Unlock

LOCKING AND UNLOCKING

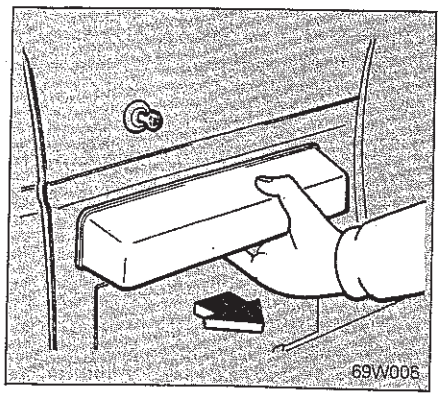

Pull the outside handle toward you to open the backdoor.

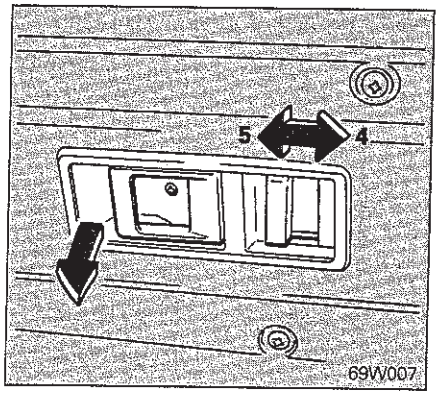


Operation from inside the vehicle (vehicles without central door locks)

4 - Lock
5 - Unlock

Pull the inside handle toward you to open the backdoor.

To lock the backdoor without a key vehicle (vehicles without central door locks)


Set the inside lock button to the locked position (slide the lock button toward "4"), and close the backdoor. Be careful not to lock the backdoor while the key is inside the vehicle.

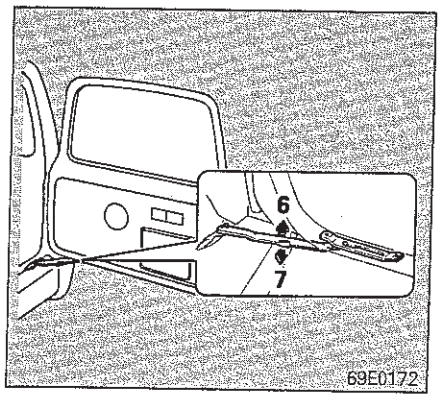

Backdoor stopper

6 - Lock
7 - Unlock


⚠ CAUTION
When closing the backdoor, be careful not to pinch your hands.

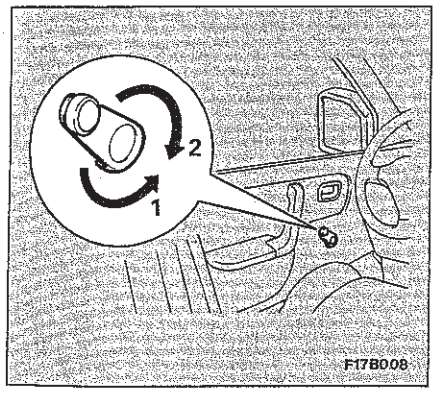

Manual window control*

EF17B-Aa

1 - To close
2 - To open

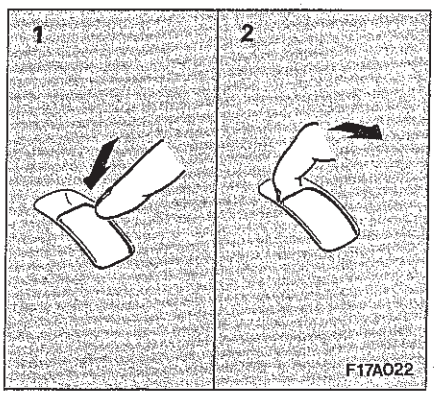


Electric window control*

EF17A-Ea

The electric windows can only be operated with the ignition switch in the "ON" position.

1 - Open
2 - Close

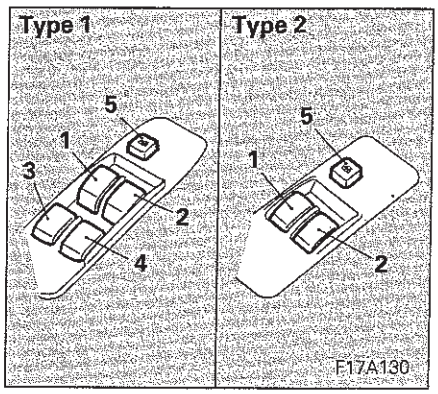


Driver's switches

The driver's switches can be used to operate all door windows.

1 - Driver's door window
The door window opens or closes while this button is pressed.
When opening the driver's door window, if the switch is fully depressed it is not necessary to hold it down for operation.
2 - Front passenger's door window
3 - Rear left door window
<Type 1 only>
4 - Rear right door window
<Type 1 only>

LOCKING AND UNLOCKING

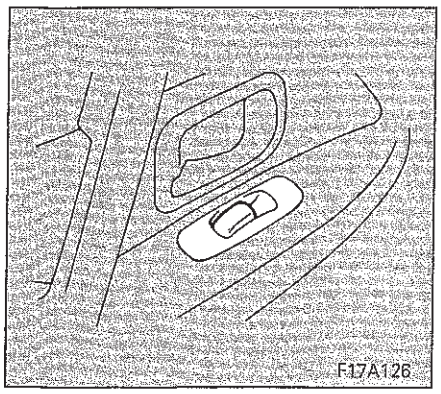

Passenger's switches

The passenger's switches can be used to operate the corresponding passenger's door windows.

NOTE
The rear door windows only open halfway, not completely.

Lock switch

5 – When this switch is operated, the passenger's switches cannot be used to open or close the door windows and the driver's switch cannot open or close any door windows other than the driver's door window.
To unlock, press it once again.


⚠ *WARNING*

(1) Be careful that either head or hands are not trapped by a closing window.
(2) A child may tamper with the switch at the risk of its hands or head becoming trapped by the window. When driving with a child in the vehicle, be sure to press the window lock switch to make the passenger's switches inoperative.
(3) Never leave the vehicle without remove the key.
(4) Never leave a child in the vehicle alone.
(5) Before operating the electric window control, make sure that nothing capable of being trapped (head, hand, finger, etc.)
(6) Repeated operation with the engine stopped will run down the battery. Operate the window switches while the engine is running.

Sli

To
Slic
pre


To
Slic
it w

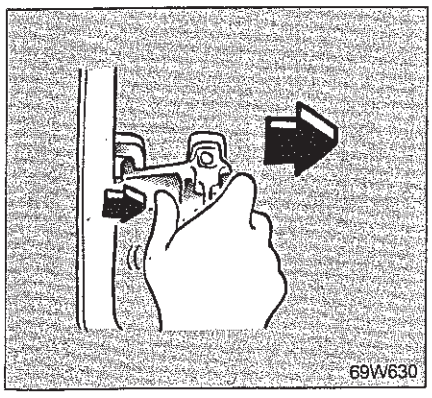

Sliding window* EF08C-A

To open
Slide the window glass rearward while pressing the lock knob.

To close
Slide the window glass all the way and it will automatically lock.

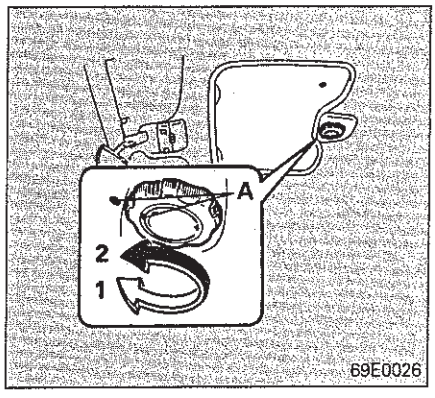


Tilt up sunroof* EF09J-A

By tuning the regulator knob, the rear end of the sunroof can be raised (opened) and lowered (closed).


1 - Open
2 - Close

⚠ CAUTION
(1) Confirm that the aligning marks (A) are in proper alignment when the sunroof is fully closed.
(2) While driving with the rear of the sunroof open, be sure not to touch either the slide locks (B) or the safety hook (C).

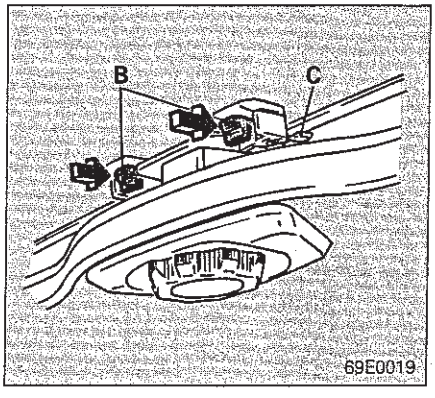


Removal of the sunroof EF09K-Ab

1. Open the sunroof completely by turning the regulator knob all the way to the right.
2. Push the rear end of the sunroof upward, while simultaneously pressing in both of the two slide lock buttons (B).

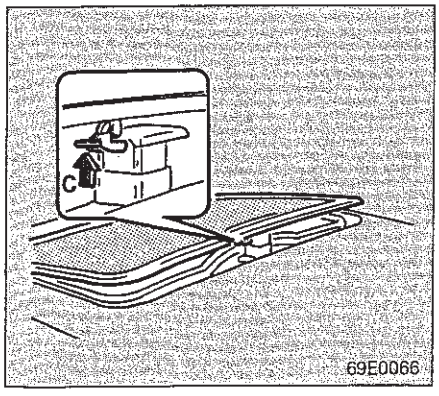


3. Press in the safety hook (C), and raise the sunroof.

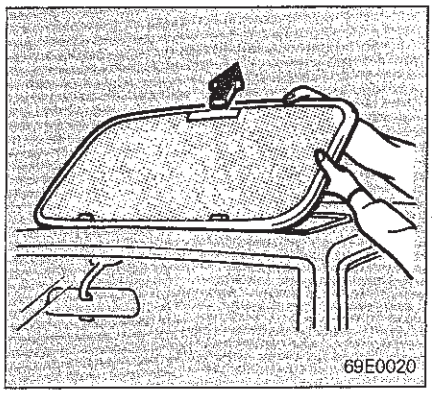

4. Pull the sunroof out toward the rear of the vehicle, and remove it.
5. Store it in the luggage compartment.

⚠ *CAUTION*


When driving with the sunroof removed, lower the regulator by turning the regulator knob all the way to the left. After doing this, confirm that the regulator does not protrude above the lever of the roof panel.

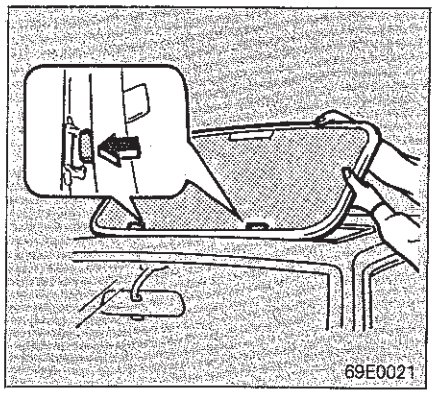

Mounting of the sunroof EF09L-A

1. Fit the two tabs on the front end of the sunroof securely into the two holes in the roof panel.


2.

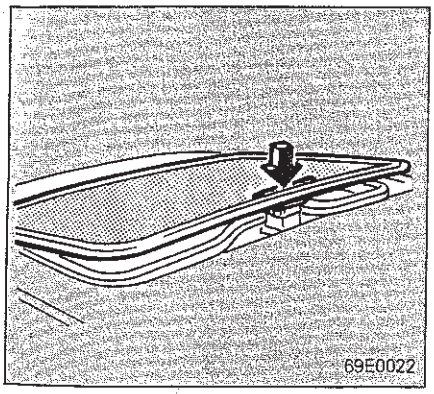

2. Connect the safety hook securely, pushing downward on the centre of the rear end of the sunroof.

⚠ CAUTION

(1) Be sure, when you are away from the vehicle, that the sunroof is installed and is completely and securely closed.
(2) Never try to remove or install the sunroof while the vehicle is moving, because if the sunroof fell and hit a pedestrian or other vehicle an injury might result.
(3) After washing the vehicle or after it has rained, be sure to wipe off any water that is on the sunroof before operating it.
(4) Do not place luggage or any heavy object on the sunroof itself, or the area around it.
(5) Do not stick head, hands or anything else out of the sunroof opening. Especially while the vehicle is in motion.

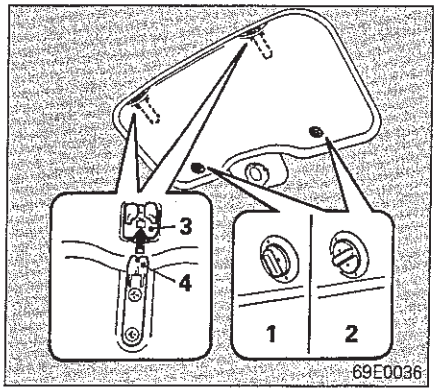


Sunshade

EF09I-B

Turn the knobs in direction to release, and then remove the sunshade.

1 - To release
2 - To fasten

When installing the sunshade, insert the tabs (4) at the front part of the sunshade in the holders (3) at the front of the sunshade; then lift the rear part of the sunshade and turn the knobs to fasten.

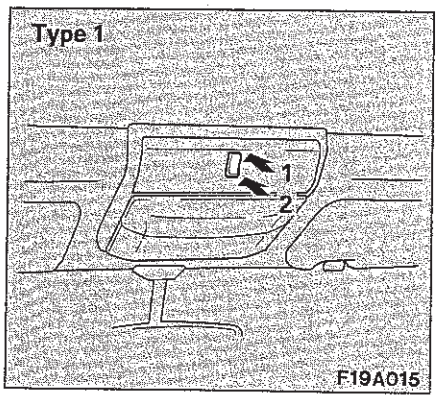

Electric sunroof*

EF19A-X

Type 1
The sunroof can only be operated with the ignition switch in the "ON" position.

1 - To tilt up
When the upper side (1) of the sunroof switch is pressed, the sunroof rear end automatically goes up for inside ventilation.
To stop the sunroof partway, push the lower side (2) of the sunroof switch.

NOTE
When the sunroof is tilted up, the sunshade is automatically opened.

2 - To tilt down
Press the lower side (2) of the sunroof switch.
To stop the sunroof partway, push the upper side (1) of the sunroof switch.

1 - To open
When the upper side (1) of the sunroof switch is pressed, the sunroof rear end automatically goes up. When the upper side (1) of the switch is pressed the second time, the sunroof automatically opens completely.
To stop the sunroof partway, press the lower side (2) of the switch.

2 - To close
The sunroof automatically closes if the lower side (2) of the sunroof switch is pressed.
To stop the sunroof partway, press the upper side (1) of the switch.


NOTE
The sunroof can be opened or closed even after the ignition switch is turned off for a 30 second period.
However, once the driver's door is closed, the sunroof cannot be operated.

Safety mechanism

If a hand or head is trapped by the closing sunroof, the sunroof will open automatically.
Nonetheless, be sure that anyone does not stick his head or hand out of the sunroof opening when closing the sunroof.
The opened sunroof will become operational after a few seconds.


⚠ *CAUTION*
The safety mechanism is cancelled just before the sunroof is fully closed to close the sunroof completely. Therefore be especially careful not to trap a finger by the sunroof.

NOTE
For safety's sake, the sunroof stops once before the sunroof is fully closed (in the tilted up condition). Re-press the lower side (2) of the switch, the sunroof will close all the way.

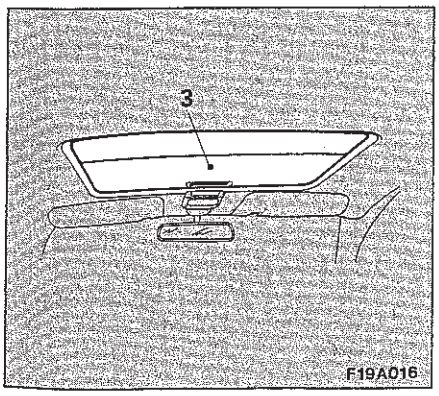

3 – Sunshade
The sunshade can be opened or closed manually while the sunroof is closed.

NOTE
The sunshade will operate together with the sunroof only when the sunroof is opened.
The sunshade is automatically opened when the sunroof is tilted up.

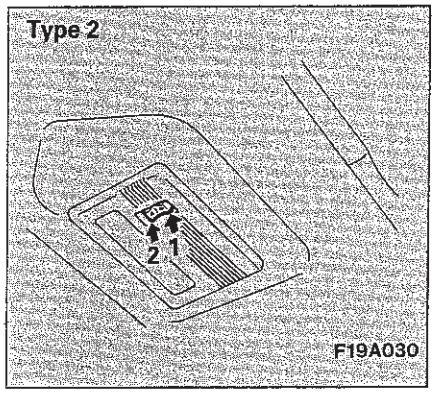

Type 2
The sunroof can be opened and closed with the ignition switch at either the "ACC" or "ON" position.
The sunroof will operate while the sunroof switch is being pressed.


1 – To open
The sunroof automatically opens if the switch is pressed.

NOTE
For safety's sake, the sunroof stops once approx. 14cm from fully opened position. Re-press the switch, the sunroof will open all the way.

2 – To close
The sunroof automatically closes if the sunroof switch is pressed.

NOTE
For safety's sake, the sunroof stops once approx. 20cm from fully closed position. Re-press the switch, the sunroof will close all the way.

LOCKING AND UNLOCKING

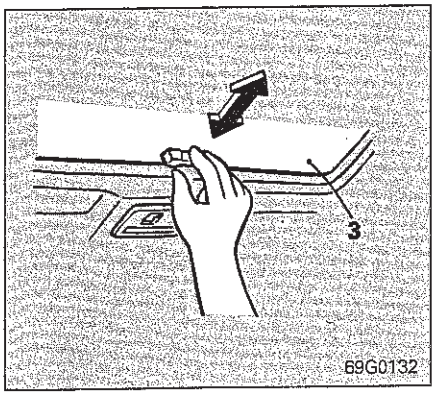



3 – Sunshade
Slide the sunshade manually to open and close it.


NOTE
The sunshade will operate together with the sunroof only when the sunroof is opened.

⚠ *WARNING*

(1) To avoid personal injury, keep the head and hands clear of the sunroof when it is opened or closed.
(2) Do not stick head, hands or anything else out of the sunroof opening while driving the vehicle.
(3) When leaving the vehicle unattended, be sure to close the sunroof and remove the ignition key.
(4) Never leave a child in the vehicle alone.
(5) Before operating the sunroof, make sure that nothing capable of being trapped (head, hand, finger, etc.)
(6) After washing the vehicle or after it has rained, wipe off any water that is on the sunroof before operating it.
(7) Do not try to operate the sunroof if it is frozen closed (after snow fall or during extreme cold).
(8) Do not sit or place a heavy luggage on the sunroof or roof opening edge.
Do not apply any force that may cause damage to the sunroof.
(9) Be careful, not to put any wax on the weatherstrip (black rubber) around the sunroof opening. If stained with wax, the weatherstrip cannot maintain a weatherproof seal with the sunroof.
(10) Release the switch as soon as the sunroof reaches the fully open or fully closed position.
(11) Do not attempt to close the sunshade when the sunroof is open.
(12) Close the sunroof during off-road driving (Vehicle with Type 1 sunroof).

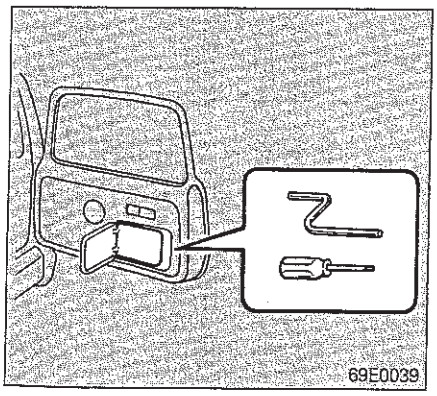

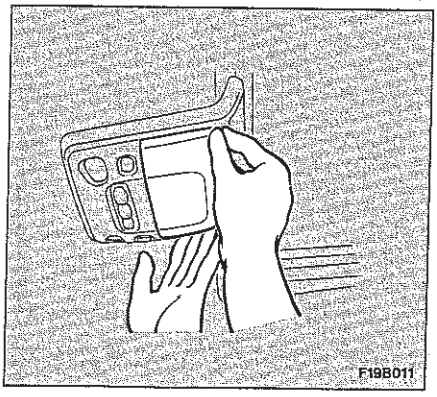

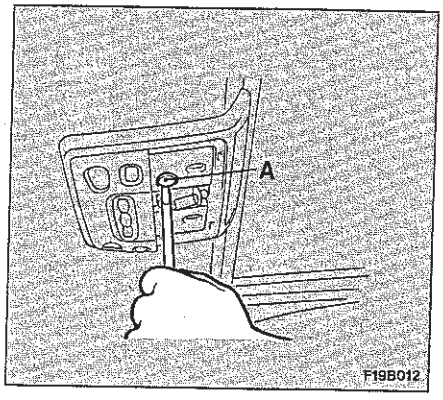

Manual operation of the sunroof

EF19B-Z


If the switch develops a malfunction and the sunroof will not move, use the following procedure to open and close it:

NOTE
Have the sunroof inspected by your authorized MITSUBISHI dealer at the earliest opportunity.


Type 1

1. Take the sunroof wrench and the screwdriver out of the tool box.
2. Remove the room lamp lens.
3. Insert the screwdriver or a suitable tool and break the pawl of the cover (A) attachment.

LOCKING AND UNLOCKING

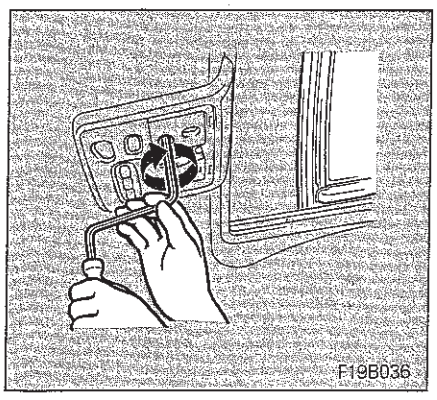


4. Fit for long end of the sunroof wrench into the screwdriver's multi-purpose handle. Next, insert the wrench into the sunroof motor drive shaft and close the sunroof by turning the wrench clockwise.

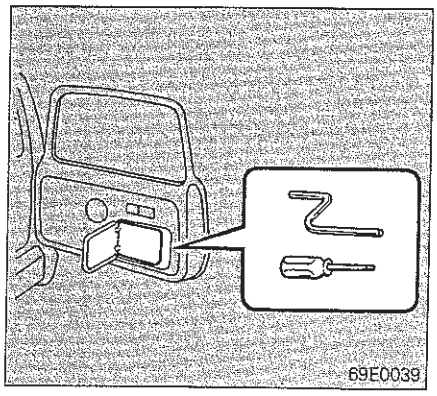

Type 2


1. Take the sunroof wrench and the screwdriver out of the tool box.

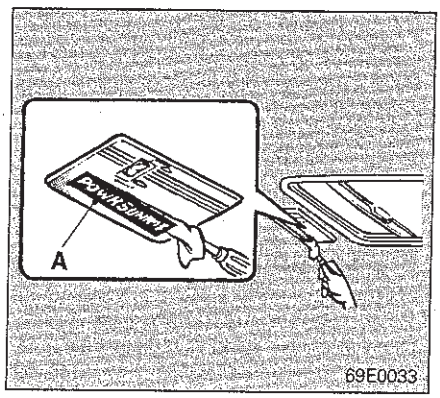


2. Remove the cover (A) with a screwdriver or a suitable tool.

   NOTE
   Wrap a piece of cloth around the tip of the screwdriver in order to avoid scratching the cover.

3.

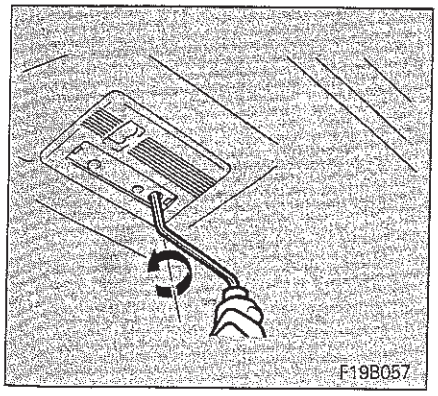

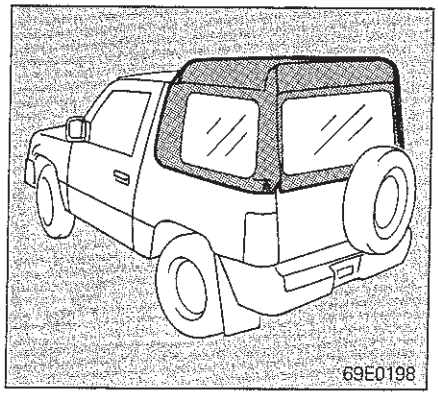

3. Fit for long end of the sunroof wrench into the screwdriver's multi-purpose handle. Next, insert the wrench into the sunroof motor drive shaft and close the sunroof by turning the wrench anticlockwise.

Canvas top*

EF04H-B


The canvas top is a unitized type on which the rear flap and side flaps can be respectively opened and closed. Moreover, the canvas top itself is removable, and the frames are also removable.

⚠ CAUTION
When the ambient temperature is low [approximately 5°C (41°F) or less], avoid opening and closing the canvas, as there is danger of damage to the texture.

To store


1. During a storm or heavy rain or when leaving the vehicle for a long period, place a body cover to both prevent water entry and protect the canvas and vehicle body paint.
2. For long storage periods, keep the canvas closed. If the canvas is folded and left stored, it may wrinkle.

LOCKING AND UNLOCKING

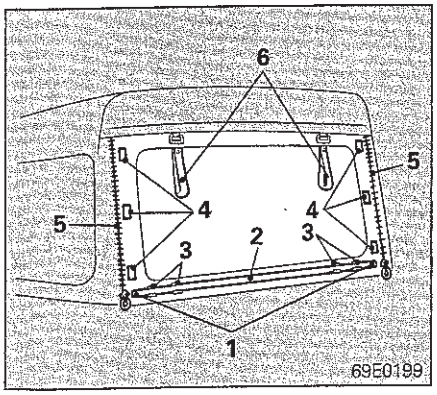


Opening the rear flap EF04A-C

1 – Pull-bands
2 – Rod
3 – Rod holders
4 – Velcros
5 – Zippers
6 – Straps

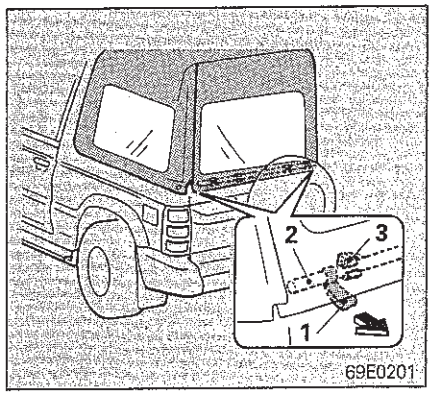


Hold and pull the pull-bands (1) rearward and remove the rod (2) from the rod holders (3).


⚠ CAUTION
Do not pull on the cloth part of the flap.

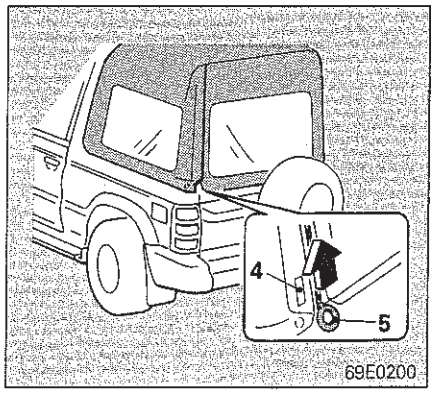


Remove the velcros (4) located on both sides of the rear flap and open the zippers (5).

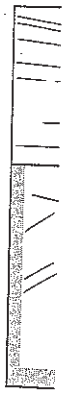

Roll
the s

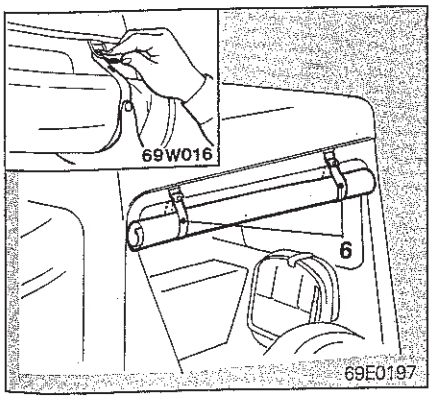

Roll up the rear flap and secure it with the straps (6).

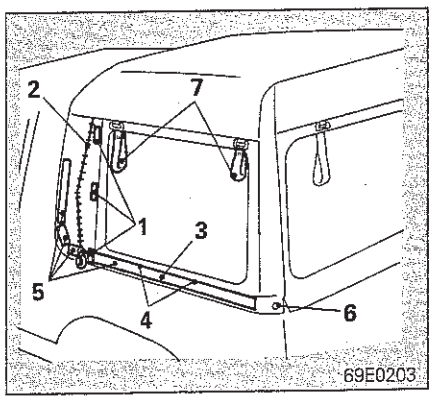


Opening the side flaps

EF04B-Ca


1 - Velcros
2 - Zippers
3 - Side rods
4 - Rod holders
5 - Locking tapes
6 - Hooks
7 - Straps

Open the zippers of the rear flap, and undo the velcros of the side flaps.
(Refer to the previous section, "Opening the rear flap".)

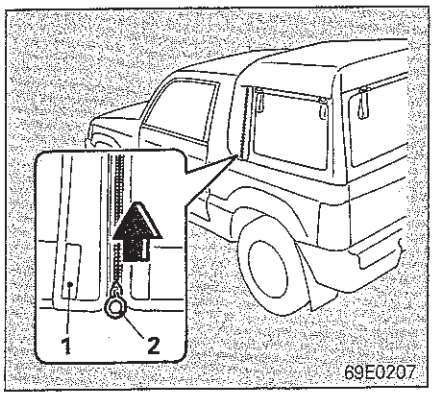


Remove the velcros (1) and then open the zippers (2).

LOCKING AND UNLOCKING

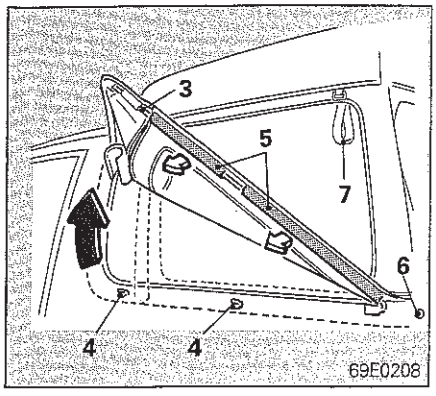

Pull off the side rods (3) from the rod holders (4).
To the position of the zipper, remove the locking tapes (5) of the lower rear sides of the side flaps in which the side rods are rolled in, and restore the side rods to their original positions.
Pull the hooks (6) toward you for removal. Roll up the side flaps and secure them with the straps (7).

⚠ CAUTION
Do not pull on the cloth part of the flaps.

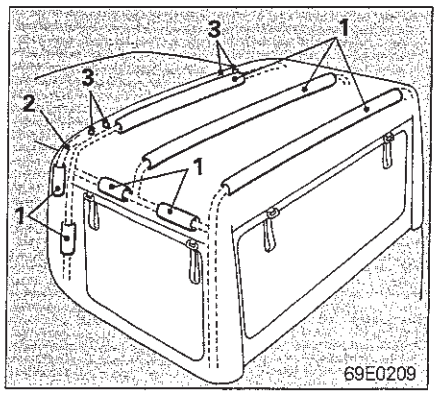


Removal of the canvas top EF04C-Ca

1 - Locking tapes
2 - Roof rod
3 - Bolts

Open the zippers and undo the velcros of the rear and side flaps. (Refer to the previous sections, "Opening the rear flap" and "Opening the side flaps".)


NOTE
Before removing the canvas top, remove all locking tapes from the rear sides of the side flaps which roll the side rods in.

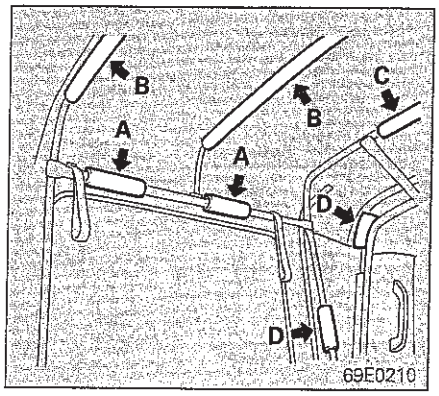


In the sequence of A, B, C and D, separate the locking tapes which fasten the inside of the canvas top to the frame. Remove the canvas from the rear to the front.



Tak
box

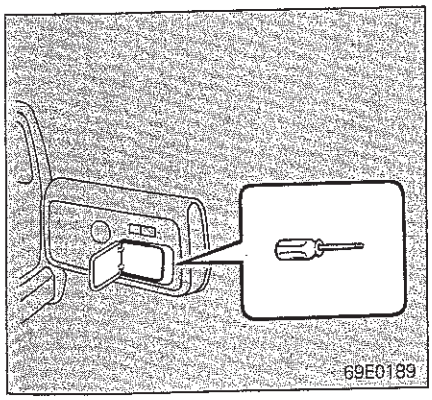


Take the screwdriver out of the tool box.

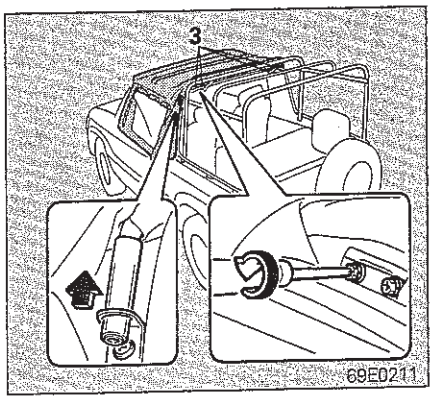


Remove the bolts (3) at the four points with a screwdriver, and remove the canvas top together with the roof rod.

⚠ CAUTION
When removing the canvas top, be careful that the metal fittings do not scratch the vehicle body.

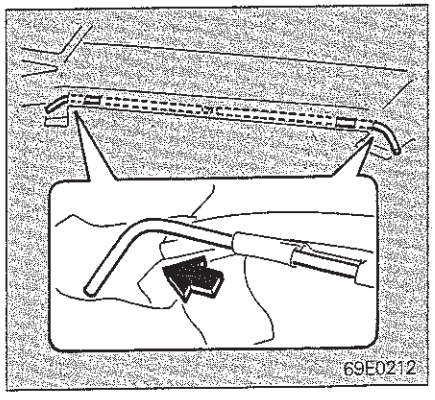


Pull out the roof rod from the canvas top, and mount the bolts (3) on the body again.

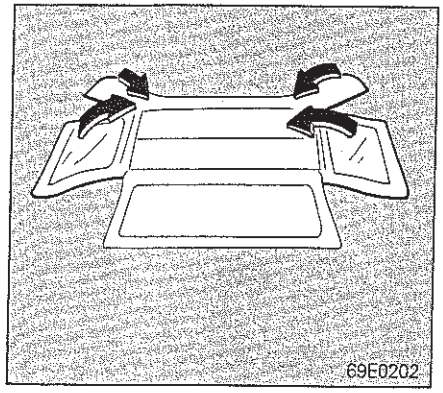


Storing the canvas top EF04D-C

Spread the canvas top on a clean space with the outside facing upward.
Fold the side flaps inward.

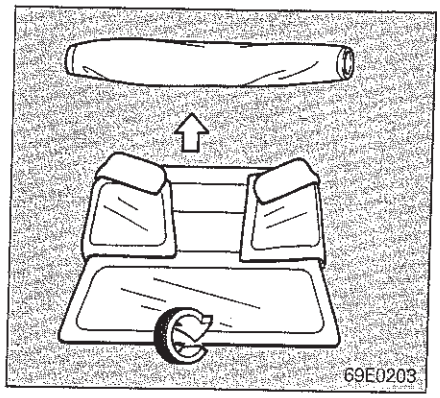

Roll up the top in the direction shown in the illustration.

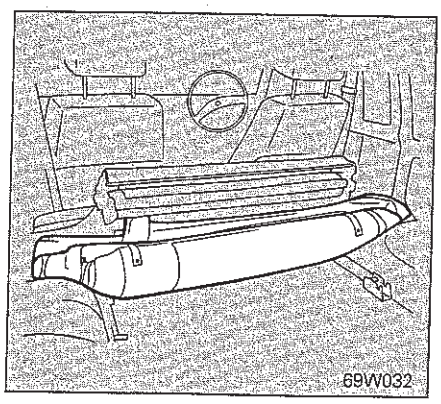

Fold the seat, and store the canvas top in the cargo room.

Mounting of the canvas top EF04E-Ca

1. Remove the roof rod from the body, and pass it through the bag at the front of the canvas top. Then, join the roof rod on the body with the bolts.
2. Set up the rear flap with the reverse procedure for removal.
3. Set up the side flaps with the reverse procedure for removal.

   NOTE
   Roll up the velcros on the bottom end and front end of the side flaps with the side rods.
   Take care not to wrinkle the side flaps.

4. Fasten the locking tapes inside the canvas top on the frames.

⚠ *CAUTION*
(1) Be sure that the canvas top is securely connected to the vehicle body and to the frame.
(2) When installing the canvas top, be careful not to scratch the body with the mounting fasteners.